




## 24 VOLT Wiring Instructions for: Roll Rite – 102216 Relay

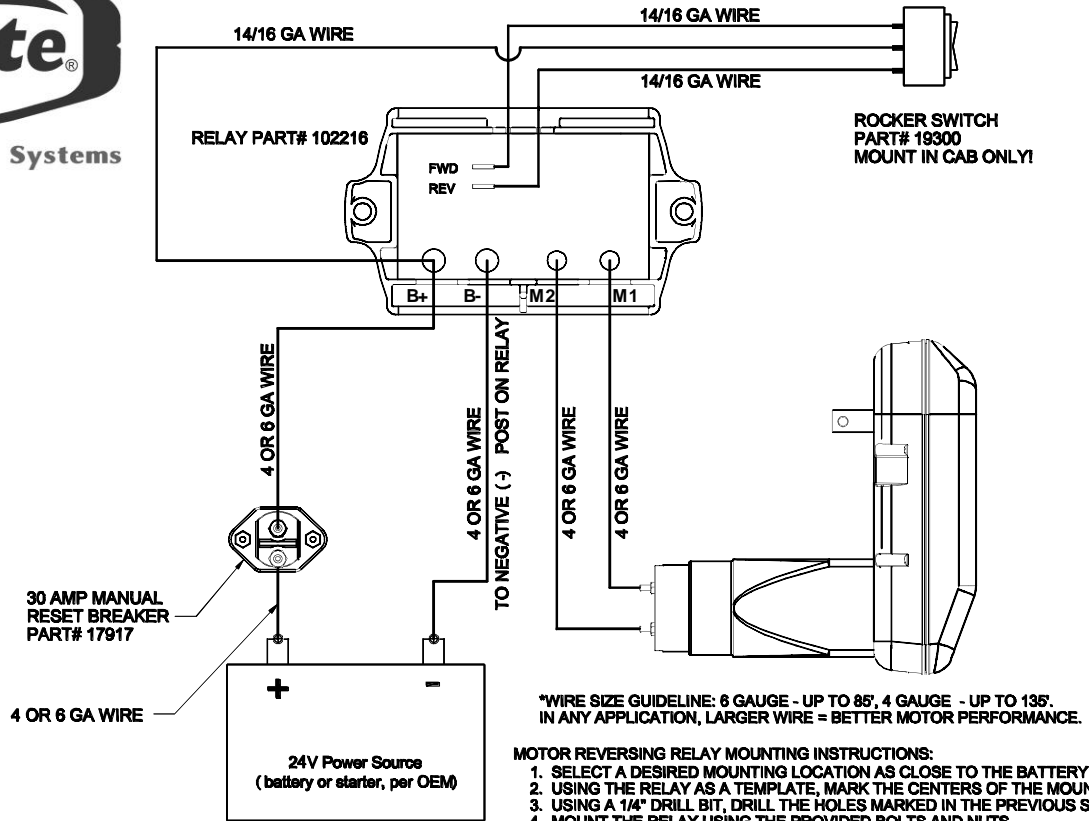


- MOTOR REVERSING RELAY MOUNTING INSTRUCTIONS:**
1. SELECT A DESIRED MOUNTING LOCATION AS CLOSE TO THE BATTERY AS POSSIBLE.
  2. USING THE RELAY AS A TEMPLATE, MARK THE CENTERS OF THE MOUNTING HOLES.
  3. USING A 1/4" DRILL BIT, DRILL THE HOLES MARKED IN THE PREVIOUS STEP.
  4. MOUNT THE RELAY USING THE PROVIDED BOLTS AND NUTS.
  5. WIRE THE RELAY ACCORDING TO THE WIRING DIAGRAM.
  6. APPLY DIELECTRIC GREASE TO ALL ELECTRICAL CONNECTIONS.

RR Part # 102607



## 24 VOLT Wiring Instructions for: Roll Rite – 102216 Relay

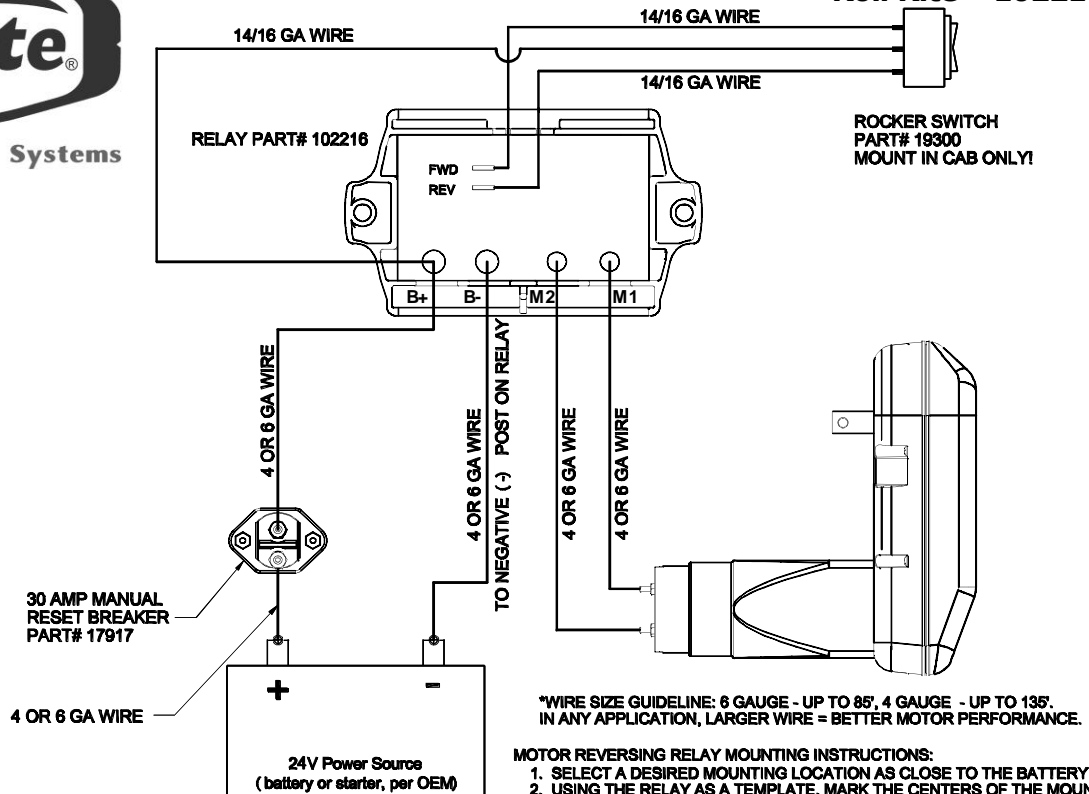

- MOTOR REVERSING RELAY MOUNTING INSTRUCTIONS:**
1. SELECT A DESIRED MOUNTING LOCATION AS CLOSE TO THE BATTERY AS POSSIBLE.
  2. USING THE RELAY AS A TEMPLATE, MARK THE CENTERS OF THE MOUNTING HOLES.
  3. USING A 1/4" DRILL BIT, DRILL THE HOLES MARKED IN THE PREVIOUS STEP.
  4. MOUNT THE RELAY USING THE PROVIDED BOLTS AND NUTS.
  5. WIRE THE RELAY ACCORDING TO THE WIRING DIAGRAM.
  6. APPLY DIELECTRIC GREASE TO ALL ELECTRICAL CONNECTIONS.

RR Part # 102607